
Scope of delivery


Coffee machine
Drip tray
Power cord

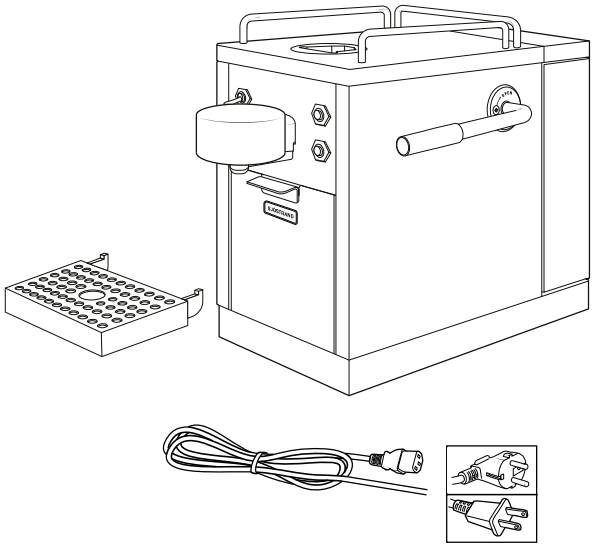

https://www.sjostrandcoffee.com/pages/after-service-and-repairs

De-airing


Before first use / After long storage

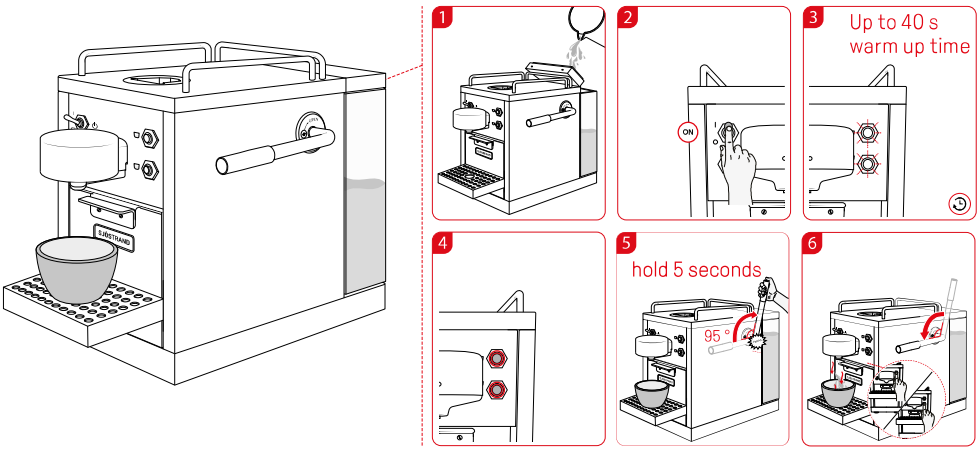

If necessary, repeat steps 5) and 6) until water flows from the nozzle.


EN

Brewing coffee

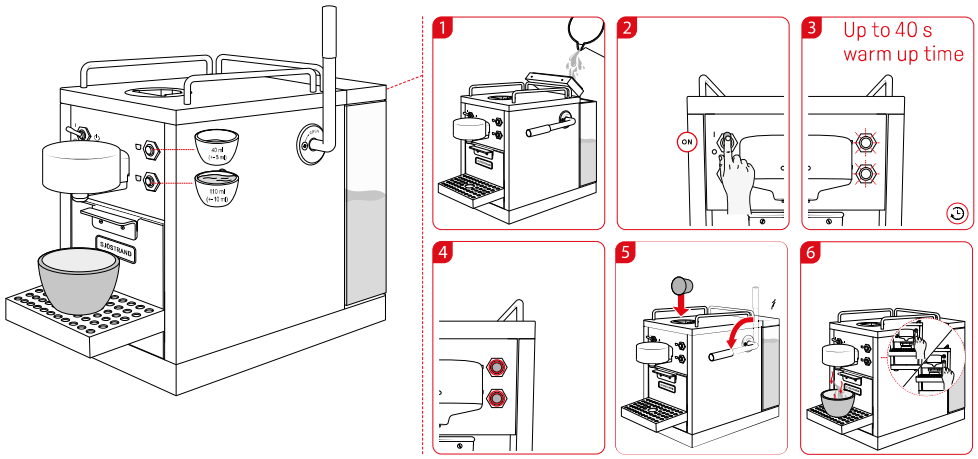


Run one cycle without a capsule to preheat the cup and rinse the machine.
After brewing: Always lift the lever carefully

Changing the brew ratio

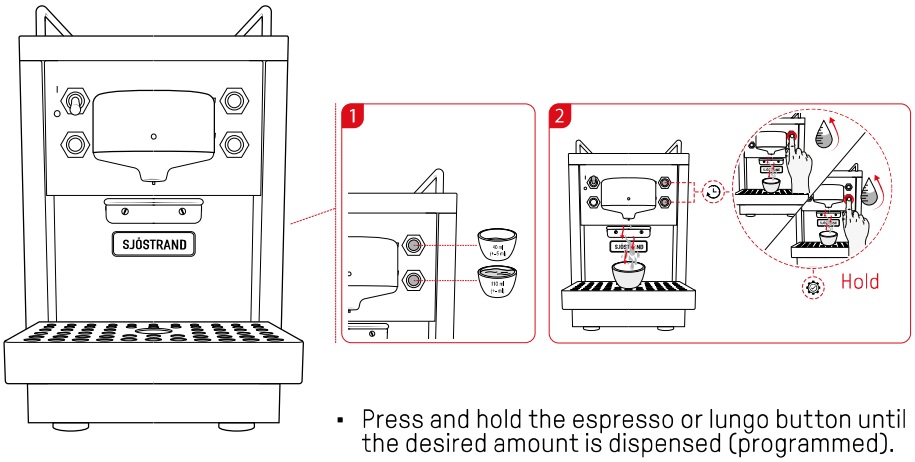


- Press and hold the espresso or lungo button until the desired amount is dispensed (programmed).
- The machine has saved the new brewing amount for this button for future brewings.
- Revert to the original brew ratio settings: perform a factory reset (see next page).

Factory reset

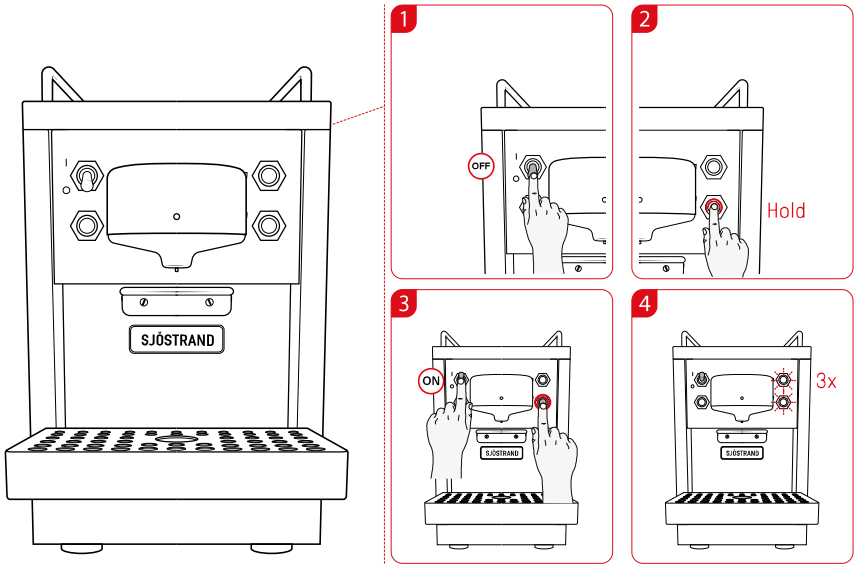


Cleaning the nozzle

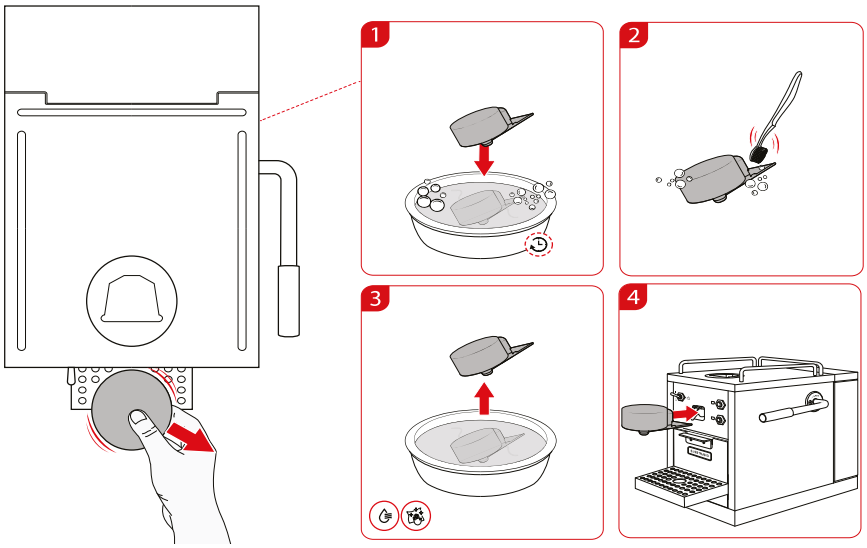

EN

Descaling

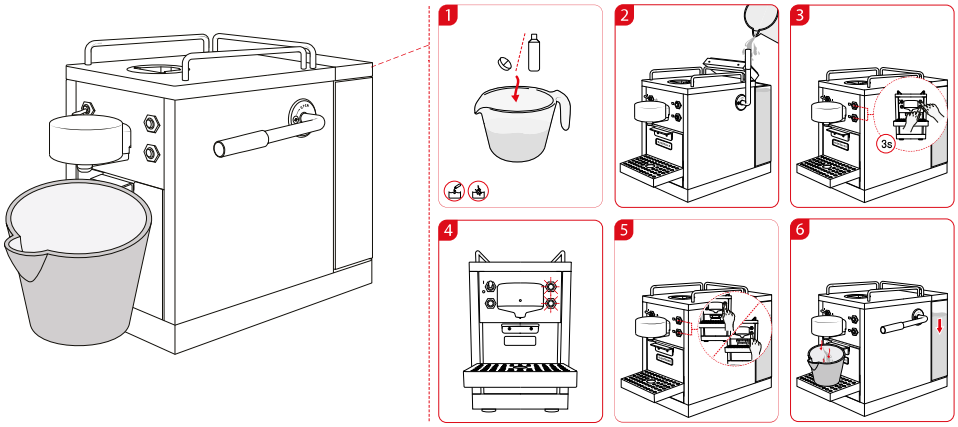

Put a jug of at least 1.2 L under the nozzle.

IMPORTANT - ALWAYS RINSE THE COFFEE MACHINE AFTER DESCALING

To do so: repeat the descaling process, using at least half a litre of clear water (no descaler) to rinse the system thoroughly.

Descale your coffee machine regularly
(for surther information, see sjostrandcoffee.com).

Troubleshooting

PROBLEM	POSSIBLE SOLUTION
My machine is new and no water is coming through.	De-air the machine by running the de-airing process a few times to get water into the pipes.
Both lights are flashing continuously and the machine is not starting to pump water.	The machine is most likely overheated. Allow it to cool down for a while before continuing.
A small amount of water is found in the capsule container.	A little water is completely normal. It usually comes from the capsule after brewing, or from the capsule inlet after brewing only water.
A large amount of water is leaking into the capsule container.	Descale the machine, clean the filter plate, and remove and clean the nozzle.
Less coffee than usual comes out of the machine.	Perform a factory reset to clear the memory function.
The lights are repeatedly blinking 5 times after switching on the machine.	This is the descaling alarm which triggers after 1200 brewings. Perform the descaling procedure.

Safety warnings

Proper use

This coffee machine is designed to prepare standard household quantities of coffee/espresso and prepare hot water.

It is intended exclusively for private use and is not designed for commercial use.

Only use the machine as described in these instructions for use. Any other use is considered improper and may result in damage to property or even personal injury. The manufacturer accepts no liability for damage caused by improper use.

Explanation of terms

You can find the following signal terms in this user manual:

⚠ WARNING
This symbol term indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

⚠ CAUTION
This signal term indicates a low risk, which, if not avoided, may result in minor or moderate injury.

NOTICE
This signal term warns you of potential damage.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:

READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE.

Risks to children and certain groups of individuals

⚠ WARNING
Risk of suffocation!

Children can become entangled in the packaging film and suffocate.

– Do not allow children to play with the packaging film.

⚠ WARNING
Risk of scalding!

If the mains cord is within reach of young children, they could pull down the coffee machine and suffer serious scalding.

– Set up the coffee machine so that neither the appliance nor the mains cord are accessible to young children.

⚠ CAUTION
Children and certain groups of people have a higher risk of being injured when handling the appliance.

– This appliance can be used by people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- This appliance can be used by children aged from 8 years and above if they have been given supervision concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children aged less than 8 years.

Risks in handling household electrical appliances

⚠ WARNING
Risk of electric shock!

Touching live parts may result in severe injury or death.

- Only connect the appliance if the socket voltage matches the requirements indicated on the type plate.
- Do not connect the appliance to a multi-socket extension cable or a multi-socket plug.
- Do not operate the appliance with an external timer or a separate remote control system.
- Connect the appliance only to a properly installed and earthed electric socket.
- Only use the appliance indoors. Do not use in wet rooms or in the rain.
- Do not operate or continue to operate the appliance if
  - it shows visible signs of damage, e.g. the supply cord is defective.
  - it starts smoking or there is a smell of burning.
  - it makes unfamiliar noises.
    In this case pull out the mains plug and contact our service department.
- This appliance can only be completely disconnected from the mains by pulling out the mains plug. The appliance must therefore be connected to an easily accessible socket so that it can be quickly disconnected from the power supply in the event of fault.
- Keep the appliance, mains plug and mains cord away from naked flames and hot surfaces.
- Do not kink or pinch the mains cord or lay it over sharp edges.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Always take hold of the mains plug itself, not the mains cord. Never touch the mains plug with wet hands.
- Never immerse the appliance, mains cord or plug in water or any other liquids.
- Switch off the appliance and unplug it from the mains when not in use, in the event of a fault, and before cleaning or maintenance.
- Inspections and repairs to the appliance may only be carried out by authorised specialists. Independent repairs made to the appliance may cause damage to property and personal injury and void liability and warranty claims.
- Never try to repair the appliance yourself.
- Never open the housing.

– Only parts corresponding to the original appliance specifications may be used for repairs.

Risks in handling coffee machines

⚠ CAUTION
Health hazard!

Failure to clean or improper use of ingredients and cleaning and descaling agents can lead to damage to health.

– Only fill the water tank with fresh, cold drinking water. Never use hot water, milk, carbonated or other liquids.
– Clean the appliance regularly as described in the instructions and use only recommended cleaning and descaling agents.

⚠ CAUTION
Risk of fire

The appliance becomes hot during operation!

– Keep the appliance and its cord away from flammable materials and hot surfaces.
– Use the appliance on a hard, flat level surface only, to avoid interruption of airflow underneath the appliance.
– Never cover the appliance during operation. Do not operate the appliance with an external timer or remote control system.

⚠ CAUTION
Risk of burns/scalding

The coffee spout and metal parts become hot during operation and may remain hot after use.

– Avoid direct contact with hot steam, water, or these surfaces.
– Only clean the appliance when switched off and cooled down.
– Always place a suitable container under the spout for hot water, steam, or milk froth.
– Do not open the coffee grounds container during operation or descaling.

SAVE THESE INSTRUCTIONS

Special Cords instructions

(FOR US AND CANADA ONLY)

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

EN

Technical data

Model(s):	M1, CN J01, CN SCC01
Power	
EU:	220–240V~, 50–60Hz, 1200–1400W
US:	120V~, 60Hz, 1200–1400W
Weight	4.5 kg
Dimensions (H x W x D) in mm	Standard: 258 x 190 x 337 Without drip tray: 258 x 190 x 263 With lever up: 338 x 190 x 337
Protection class	I
Pump pressure	19 bars
Capsule container capacity	12 / 15 (without water separator)
Removable water tank volume	1.2 litres
Water Separator	Removable
Drip tray	Adjustable and removable
Brew ratio/cup sizing	Automatic and programmable
Power Saving mode	Activates after 28 minutes
Brew ratios*	Espresso (40ml) / Lungo (110ml) / custom
Capsule system**	Nespresso® Original

*The brew ratios may vary depending on the capsule content.

**Only Sjöstrand and Nespresso® Original capsules are guaranteed to work with The Original

Disposal

Device



Electrical appliances contain harmful substances as well as valuable resources.

Every consumer is therefore required by law to dispose of old electrical appliances at an authorised collection or return point. They will thus be made available for environmentally-sound, resource-saving recycling.

You can dispose of old electrical appliances free of charge at your local recycling centre.

Please contact your dealer directly for more information about this topic.

Packaging



If you have sufficient space, we recommend retaining the packaging, at least during the warranty period. If the appliance needs to be sent out for repairs, only the original packaging will provide sufficient protection.

If you would like to dispose of the packaging, please dispose of it in an environmentally friendly way.

Troubleshooting & customer support

For troubleshooting, please visit
www.sjostrandcoffee.com/pages/contact
or scan the QR code.

Compliance and Certifications

Declaration of Conformity (EU)

The full text of the EU Declaration of Conformity can be requested at:
info@sjostrandcoffee.com

Declaration of Conformity (North Amercia)

CONFORMS TO UL STD.1082
CERTIFIED TO CSA STD.C22.2
NO.64

2024.08
Intertek
4007119

Control number: 4007119
Standards applied: UL 1082; CSA C22.2 No. 64
Product: Coffee Maker
Model(s): M1, CN-J01, CN-SCC01

FCC (USA)

FCC Statement:
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.